

- | | | | |
|---|--------------|---|-------------------|
| 1 | USB 2.0 (x2) | 4 | HDMI Output |
| 2 | LAN Port | 5 | DC in |
| 3 | Audio Out | 6 | microSD card slot |

Package content:

- Power Adapter




RS-10 Configuration

Direct Connect:




1. Connect the provided power adapter into the DC in **(5)**
2. Connect Ethernet cable to the computer and to LAN port **(2)**.
3. Connect an HDMI cable to HDMI port **(4)** to an Videowall.
4. Configure your computer system's network settings to:
 - a. IP address (TCP/IPv4): 192.168.100.2
 - b. Subnet mask: 255.255.255.0
5. Open your browser (Google Chrome is recommended) and connect to the RS-10:
 - c. Default URL: <http://192.168.100.1>
 - d. Default login: admin
 - e. Default password: admin

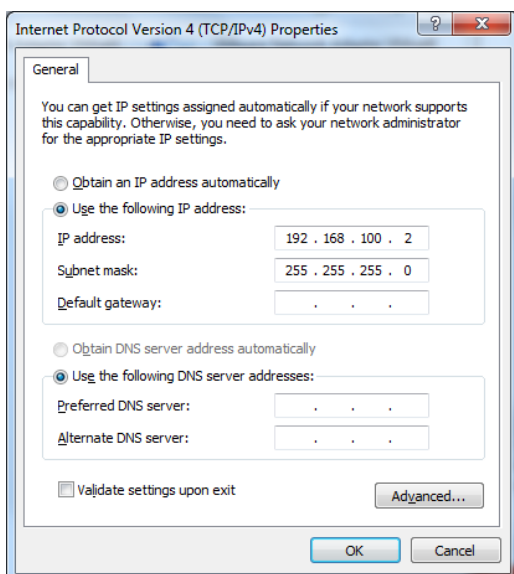

With DHCP networking:


If you want the RS-10 connect to a DHCP network, you need to directly connect with RS-10 first and change the networking setting of the RS-10:

1. Click **SystemConfig** on the main page of RS-10, then click **Network config** Tab.
2. Double-click textbox of DHCP and make sure DHCP is turned on, then Click **Apply**.
3. Click **Power** tab, and click **Reboot** button to reboot the RS-10.

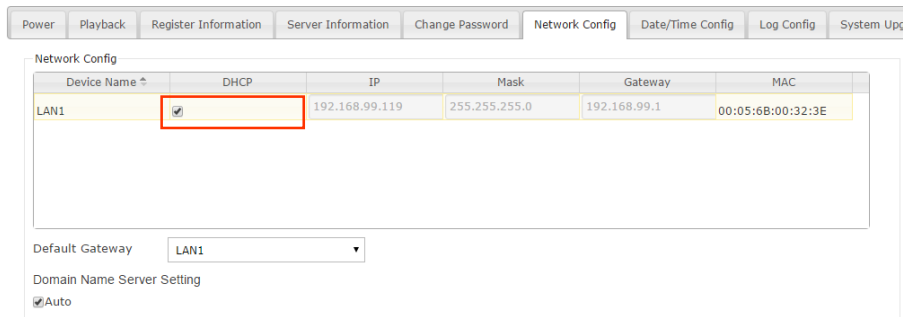

4. After reboot, the RS-10 IP address will be displayed on the boot screen.

 Example:



Change the RS-10 into the diagram below:

