



- | | | |
|-----------------------|----------------------|-----------------------|
| 1 Power Button | 2 COM Port | 3 USB 3.0 (x2) |
| 4 DC in | 5 HDMI Output | 6 HDMI Output |
| 7 USB 2.0 (x2) | 8 LAN Port | 9 Audio Out |
| 10 Mic in | | |

Package content:

- Power Adapter
- Power Cord





RS-240 Configuration

Direct Connect:




1. Connect the provided power adapter into the DC in **(4)**.
2. Connect Ethernet cable to the computer and to LAN port **(8)**.
3. Connect a HDMI cable to HDMI port **(5)** or **(6)** to an Videowall.
4. Configure your computer system's network settings to:
 - a. IP address (TCP/IPv4): 192.168.100.2
 - b. Subnet mask: 255.255.255.0
5. Open your browser (Google Chrome is recommended) and connect to the RS-240:
 - c. Default URL: <http://192.168.100.1>
 - d. Default login: admin
 - e. Default password: admin

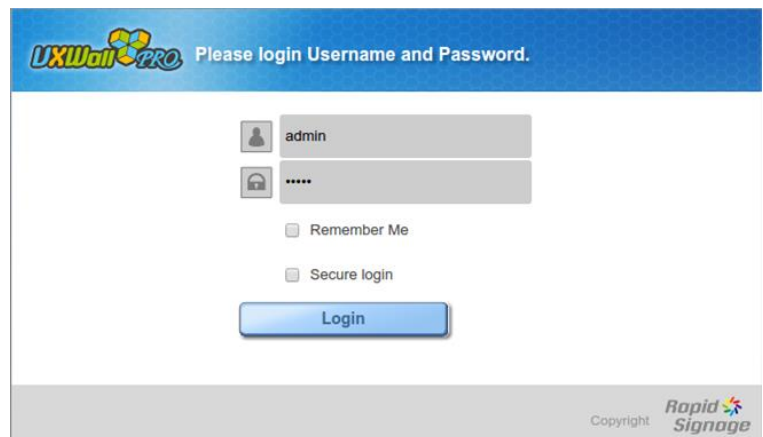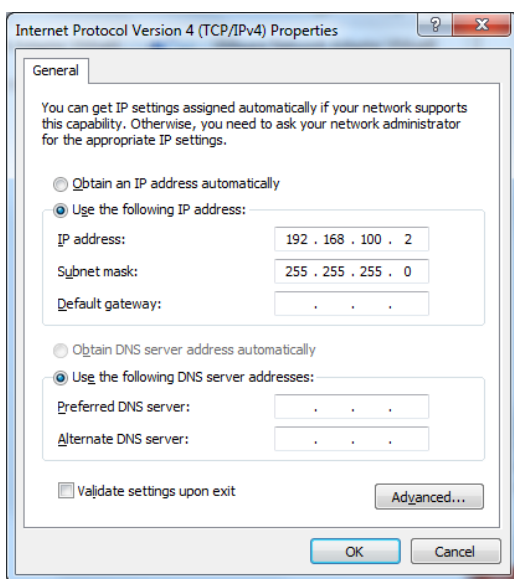

With DHCP networking:

If you want the RS-240 connect to a DHCP network, you need to directly connect with RS-240 first and change the networking setting of the RS-240:

1. Click **SystemConfig** on the main page of RS-240, then click **Network config** Tab.
2. Double-click textbox of DHCP and make sure DHCP is turned on, then Click **Apply**.
3. Click **Power** tab, and click **Reboot** button to reboot the RS-240.

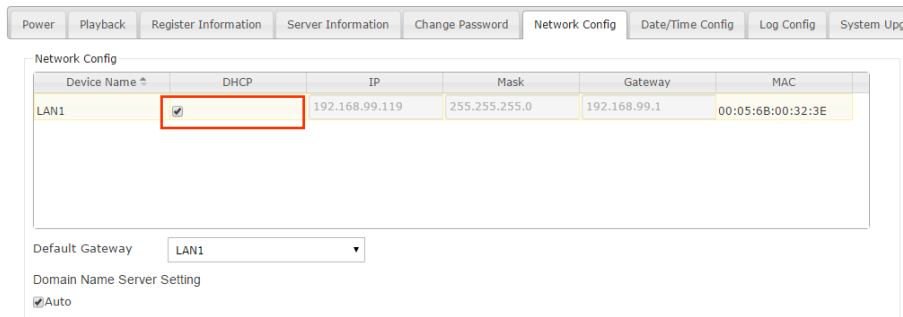

4. After reboot, the RS-240 IP address will be displayed on the boot screen.

Example:



Change the RS-240 into the diagram below:

