



- |                       |                      |                       |
|-----------------------|----------------------|-----------------------|
| <b>1</b> Power Button | <b>2</b> COM Port    | <b>3</b> USB 3.0 (x2) |
| <b>4</b> DC in        | <b>5</b> HDMI Output | <b>6</b> HDMI Output  |
| <b>7</b> USB 2.0 (x2) | <b>8</b> LAN Port    | <b>9</b> Audio Out    |
| <b>10</b> Mic in      |                      |                       |

## Package content:

- Power Adapter
- Power Cord





# RS-240 Configuration

## Direct Connect:




1. Connect the provided power adapter into the DC in (4).
2. Connect Ethernet cable to the computer and to LAN port (8).
3. Connect a HDMI cable to HDMI port (5) or (6) to an Videowall.
4. Configure your computer system's network settings to:
  - a. IP address (TCP/IPv4): 192.168.100.2
  - b. Subnet mask: 255.255.255.0
5. Open your browser (Google Chrome is recommended) and connect to the RS-240:
  - c. Default URL: <http://192.168.100.1>
  - d. Default login: admin
  - e. Default password: admin

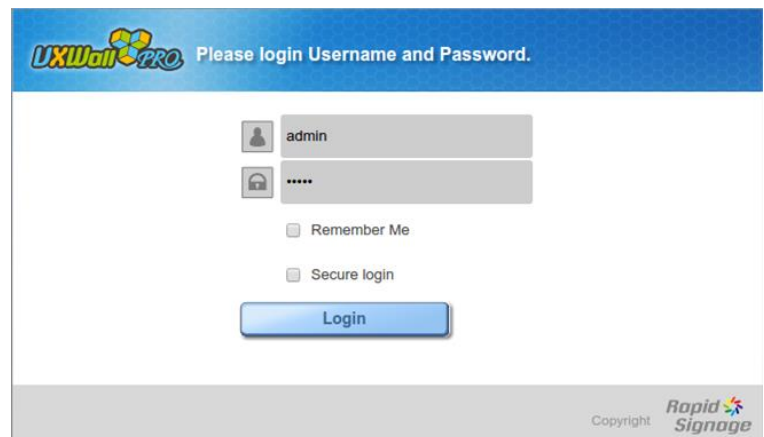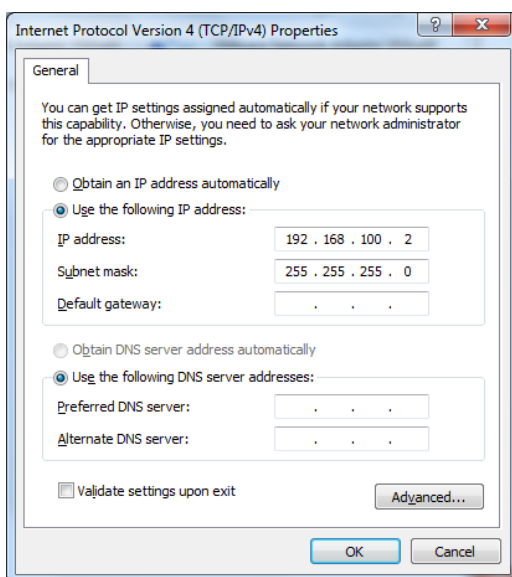

## With DHCP networking:

If you want the RS-240 connect to a DHCP network, you need to directly connect with RS-240 first and change the networking setting of the RS-240:

1. Click **SystemConfig** on the main page of RS-240, then click **Network config** Tab.
2. Double-click textbox of DHCP and make sure DHCP is turned on, then Click **Apply**.
3. Click **Power** tab, and click **Reboot** button to reboot the RS-240.

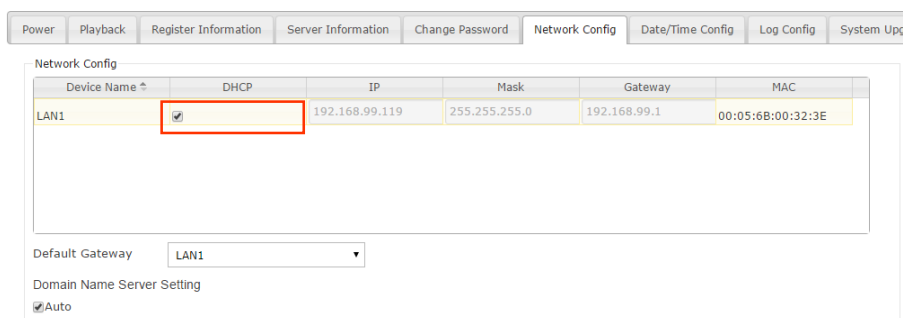

4. After reboot, the RS-240 IP address will be displayed on the boot screen.

Example:

```
NetWork :  
Lan1 : 192.168.99.52
```

Change the RS-240 into the diagram below:

