



- | | | | | | |
|---|--------------|----|----------------|----|--------------|
| 1 | Power Button | 6 | LAN Ports (x2) | 11 | HDMI Output |
| 2 | USB 2.0 (x2) | 7 | USB 3.0 (x4) | 12 | Power Switch |
| 3 | Mini DP (x4) | 8 | DVI | 13 | AC in |
| 4 | Audio Out | 9 | COM Ports | | |
| 5 | Mic in | 10 | Display Port | | |

Package content:

- Power Cord





RS-410 Configuration

Direct Connect:




1. Connect the provided power adapter into the AC in **(13)**
2. Connect Ethernet cable to the computer and to LAN port **(6)**.
3. Connect Mini DP cable to Mini DP port **(3)** to an Videowall.
4. Configure your computer system's network settings to:
 - a. IP address (TCP/IPv4): 192.168.100.2
 - b. Subnet mask: 255.255.255.0
5. Open your browser (Google Chrome is recommended) and connect to the RS-410:
 - c. Default URL: <http://192.168.100.1>
 - d. Default login: admin
 - e. Default password: admin

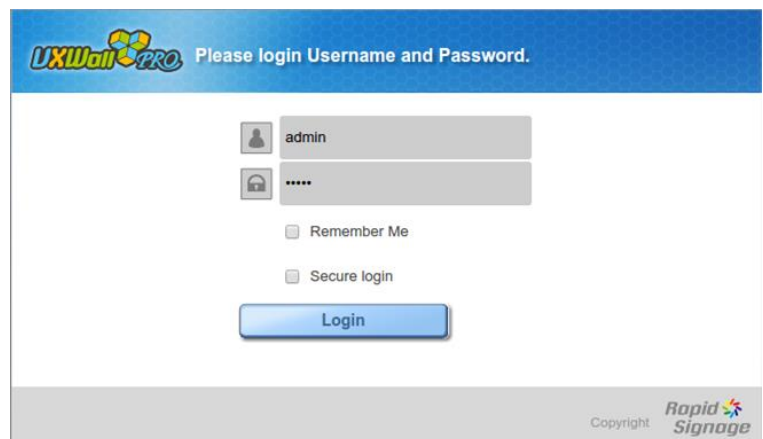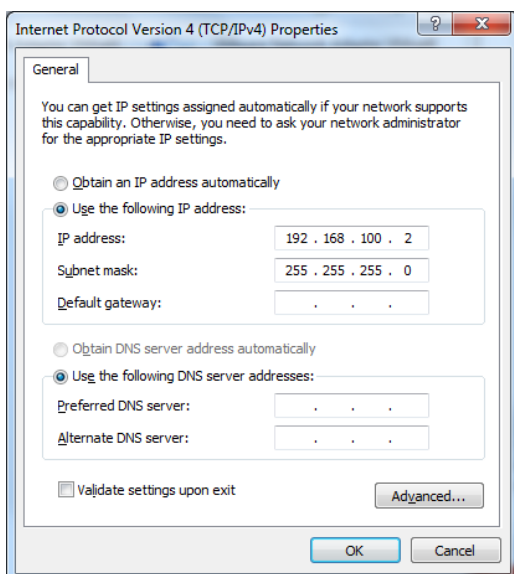

With DHCP networking:

If you want the RS-410 connect to a DHCP network, you need to directly connect with RS-410 first and change the networking setting of the RS-410:

1. Click **SystemConfig** on the main page of RS-410, then click **Network config** Tab.
2. Double-click textbox of DHCP and make sure DHCP is turned on, then Click **Apply**.
3. Click **Power** tab, and click **Reboot** button to reboot the RS-410.

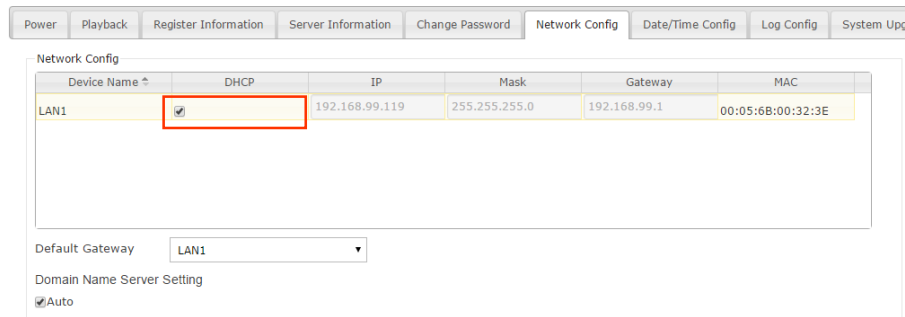

4. After reboot, the RS-410 IP address will be displayed on the boot screen.

Example:

```
NetWork :  
Lan1 : 192.168.99.52
```

Change the RS-410 into the diagram below:

