



- | | | |
|------------------------|------------------------|-------------------------|
| 1 Power Button | 2 USB 2.0 (x2) | 3 COM Port |
| 4 Mini DP (x8) | 5 Audio Out | 6 LAN Ports (x2) |
| 7 USB 3.0 (x2) | 8 Display Port | 9 HDMI Output |
| 10 VGA Port | 11 DVI | 12 PS/2 Port |
| 13 USB 2.0 (x4) | 14 Power Switch | 15 AC in |

Package content:

- Power Cord





RS-800 Configuration

Direct Connect:




1. Connect the provided power adapter into the AC in **(15)**
2. Connect Ethernet cable to the computer and to LAN port **(6)**.
3. Connect Mini DP cable to Mini DP port **(4)** to an Videowall.
4. Configure your computer system's network settings to:
 - a. IP address (TCP/IPv4): 192.168.100.2
 - b. Subnet mask: 255.255.255.0
5. Open your browser (Google Chrome is recommended) and connect to the RS-800:
 - c. Default URL: <http://192.168.100.1>
 - d. Default login: admin
 - e. Default password: admin

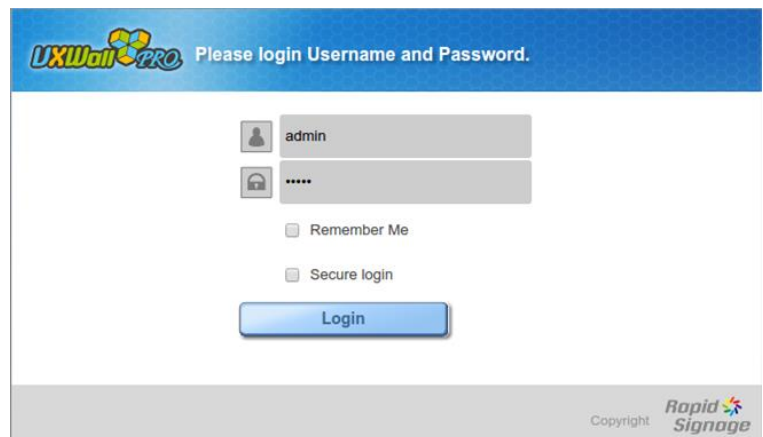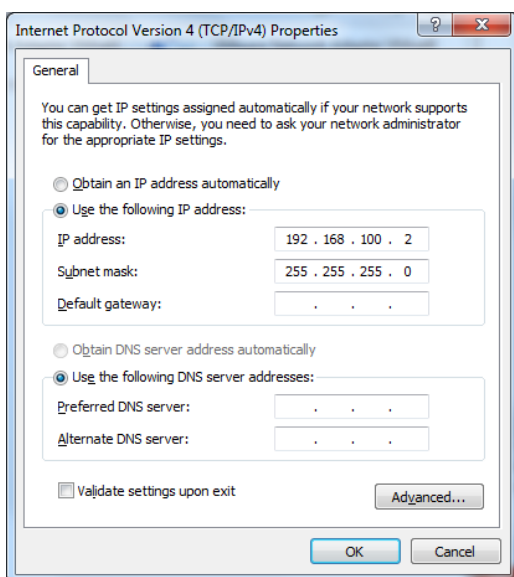

With DHCP networking:

If you want the RS-800 connect to a DHCP network, you need to directly connect with RS-800 first and change the networking setting of the RS-800:

1. Click **SystemConfig** on the main page of RS-800, then click **Network config** Tab.
2. Double-click textbox of DHCP and make sure DHCP is turned on, then Click **Apply**.
3. Click **Power** tab, and click **Reboot** button to reboot the RS-800.

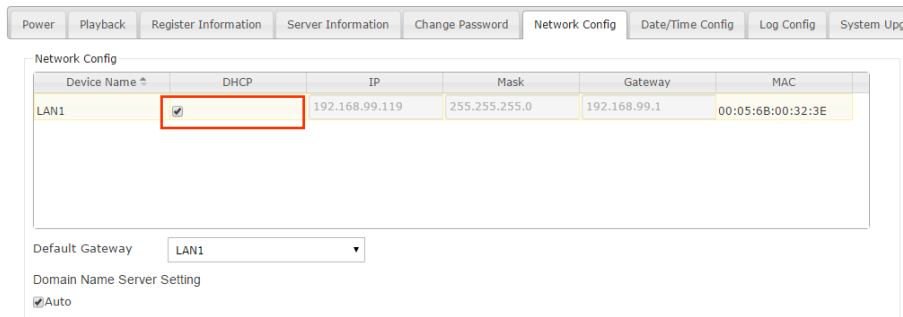

4. After reboot, the RS-800 IP address will be displayed on the boot screen.

Example:

```
NetWork :  
Lan1 : 192.168.99.52
```

Change the RS-800 into the diagram below:

