



1 Power Button

4 Power Switch

7 USB 3.0 (x2)

2 COM Ports (x2)

5 AC in

8 USB 2.0 (x4)

3 Display Ports (x15)

6 LAN Ports (x2)

9 Audio Out

## Package content:

- Power Cord





# RS-1260 Configuration

## Direct Connect:



1. Connect the provided power adapter into the AC in **(5)**
2. Connect Ethernet cable to the computer and to LAN port **(6)**.
3. Connect a DisplayPort cable to Display port **(3)** to an Videowall.
4. Configure your computer system's network settings to:
  - a. IP address (TCP/IPv4): 192.168.100.2
  - b. Subnet mask: 255.255.255.0
5. Open your browser (Google Chrome is recommended) and connect to the RS-1260:
  - c. Default URL: <http://192.168.100.1>
  - d. Default login: admin
  - e. Default password: admin

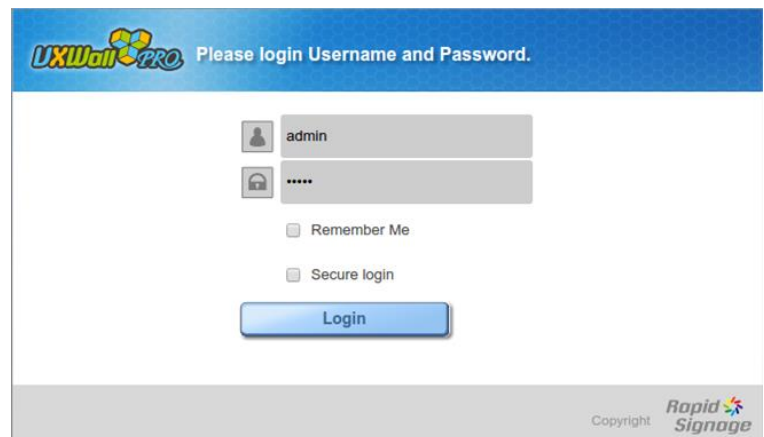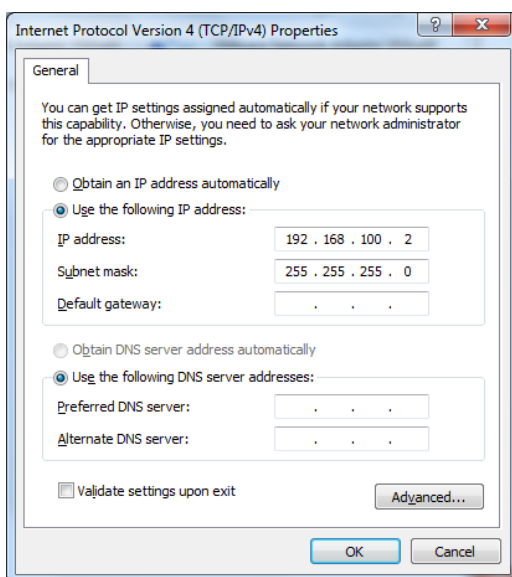

## With DHCP networking:

If you want the RS-1260 connect to a DHCP network, you need to directly connect with RS-1260 first and change the networking setting of the RS-1260:

1. Click **SystemConfig** on the main page of RS-1260, then click **Network config** Tab.
2. Double-click textbox of DHCP and make sure DHCP is turned on, then Click **Apply**.
3. Click **Power** tab, and click **Reboot** button to reboot the RS-1260.

Device Name	DHCP	IP	Mask	Gateway	MAC
LAN1	<input checked="" type="checkbox"/>	192.168.99.119	255.255.255.0	192.168.99.1	00:05:68:00:32:3E

Default Gateway: LAN1

Domain Name Server Setting:  Auto

4. After reboot, the RS-1260 IP address will be displayed on the boot screen.

Example:

```
NetWork :  
Lan1 : 192.168.99.52
```

Change the RS-1260 into the diagram below:

