



- | | | |
|-----------------------|-------------------------|------------------------------|
| 1 Power Button | 2 COM Ports (x2) | 3 Display Ports (x15) |
| 4 Power Switch | 5 AC in | 6 LAN Ports (x2) |
| 7 USB 3.0 (x2) | 8 USB 2.0 (x4) | 9 Audio Out |

Package content:



- Power Cord

RS-1260 Configuration

Direct Connect:



1. Connect the provided power adapter into the AC in **(5)**
2. Connect Ethernet cable to the computer and to LAN port **(6)**.
3. Connect a DisplayPort cable to Display port **(3)** to an Videowall.
4. Configure your computer system's network settings to:
 - a. IP address (TCP/IPv4): 192.168.100.2
 - b. Subnet mask: 255.255.255.0
5. Open your browser (Google Chrome is recommended) and connect to the RS-1260:
 - c. Default URL: <http://192.168.100.1>
 - d. Default login: admin
 - e. Default password: admin

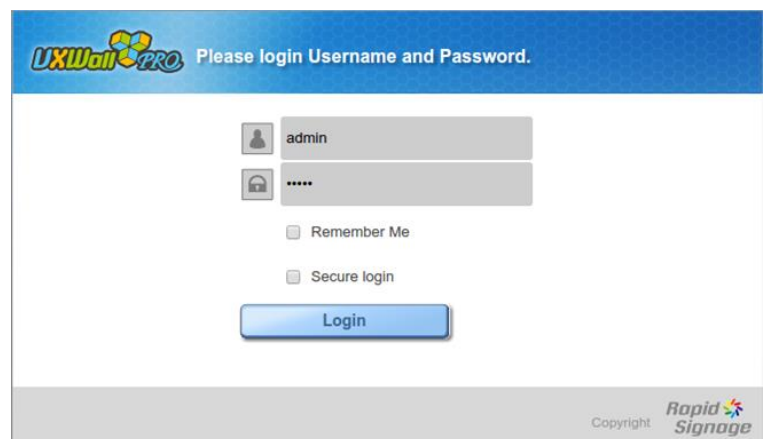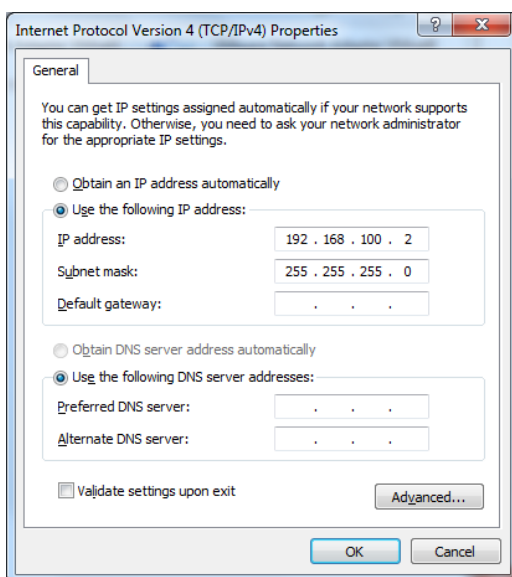

With DHCP networking:

If you want the RS-1260 connect to a DHCP network, you need to directly connect with RS-1260 first and change the networking setting of the RS-1260:

1. Click **SystemConfig** on the main page of RS-1260, then click **Network config** Tab.
2. Double-click textbox of DHCP and make sure DHCP is turned on, then Click **Apply**.
3. Click **Power** tab, and click **Reboot** button to reboot the RS-1260.

Device Name	DHCP	IP	Mask	Gateway	MAC
LAN1	<input checked="" type="checkbox"/>	192.168.99.119	255.255.255.0	192.168.99.1	00:05:68:00:32:3E

Default Gateway: LAN1

Domain Name Server Setting: Auto

4. After reboot, the RS-1260 IP address will be displayed on the boot screen.

Example:

```
NetWork :  
Lan1 : 192.168.99.52
```

Change the RS-1260 into the diagram below:

